

BT6 Battery Tester Instructions (to test 30ah-130ah)

Step 1. Identify AH of battery



Step 2. Select ah on tester by turning the dials to the appropriate number, i.e. 20 & 2 = 22ah




Step 3. Connect tester to a battery you want to test, making sure you connect red terminal to red, black to black.

N.B the tester has reverse polarity protection.



Step 4. Await the results of the test, once the test has finished (usually around 3-4hours for an 80ah battery) the tester will make a sound,

The results of the test will display in % capacity , so if the tester is testing a 100ah battery and the tester states 50% then the battery has 50Ah remaining capacity.

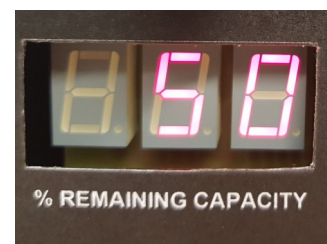

Head Office
Field Ind Est
Lowmoor Road
Kirkby in Ashfield
NG177LJ

Nuthall Store
Nottingham Road
Nuthall
NG16 1DH

Ilkeston Store
27-33 Nottingham Rd
Ilkeston
Derbyshire
DE7 5NN

Phone: 01623 757377
E-mail: sales@countybattery.co.uk

www.countybattery.co.uk

